


5 x 28W Max G9 Eco Halogen (required)  
Dimmable  
**FCL-25908**

**Installation**

Existing fittings must be completely removed before installation of a new product. Before removing the existing fitting, **carefully note the position of each set of wires.**


- Remove the fixing bracket from the canopy and attach to the ceiling using the screws provided. Make sure that there is a joist at the point of fixing to support the weight of the product. Take care to avoid damaging any concealed wiring and pipes.
- The arms of the fitting have been deliberately moved out of position.

Before installation, the arms must be correctly repositioned by hand into equal fifths. Each arm has a spring washer fitted to it to enable the arm to be repositioned without the need for loosening or retightening the nut.

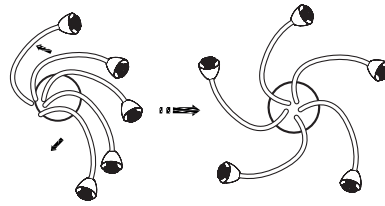

**Wiring**

Having correctly identified the wiring from your existing light fitting, pull the wire through the hole and connect to the connection block inside the product in the following way:

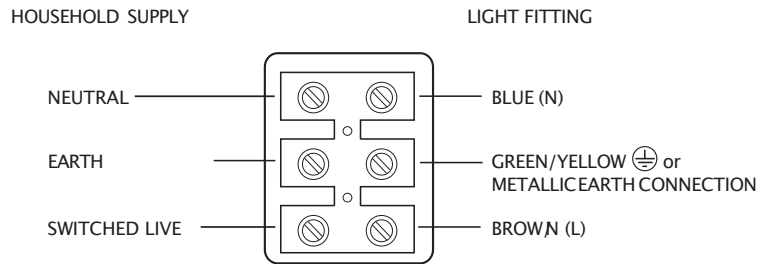

**Check that...**

- You have correctly identified the house wires.
- The connections are tight.
- No loose strands have been left out of the connection block.

**Commissioning**

- This product has "L" shaped fixing holes to allow easy fixing to the fixing bracket. Locate the "L" slots around the small screws on the fixing bracket. Rotate the ceiling cover to attach the product to the strap. Tighten the screws to secure. Take care not to trap any wiring.
- To attach the shades, remove metal ring, locate the shade over the threaded lampholder and refit metal ring and secure in place with the supplied tool. Do not overtighten.
- Fit the bulbs. **Note: Never fit bulbs of a higher wattage than specified on the label.**
- Replace fuse or circuit breaker and switch on. Your light is now ready for use.

