




7626-000

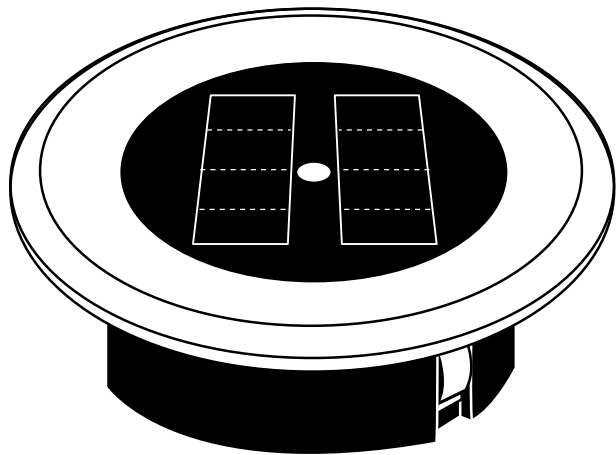


1.

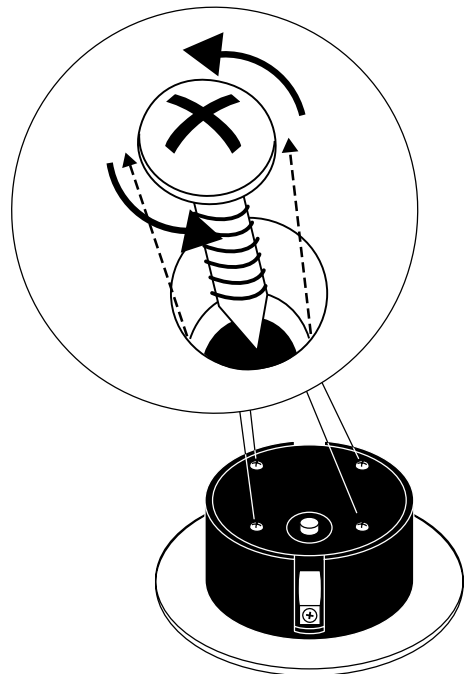


2.

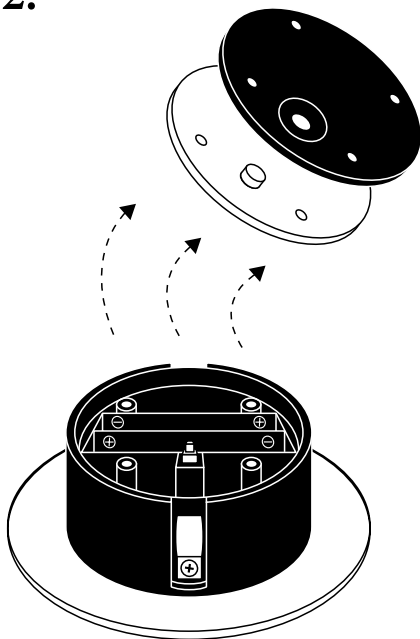


3.

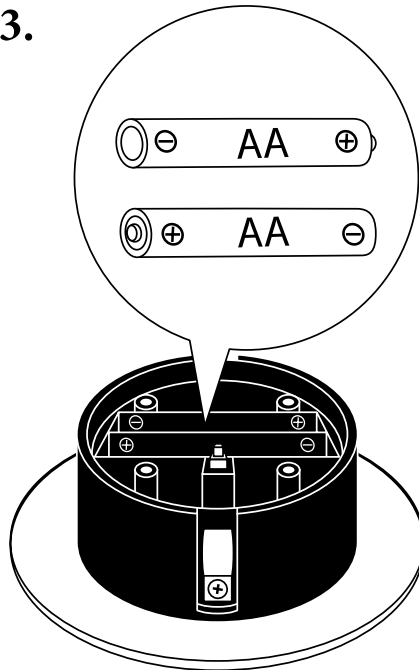


4.

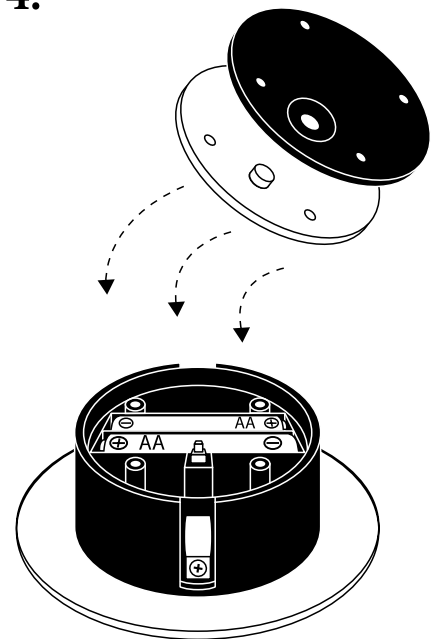



5.

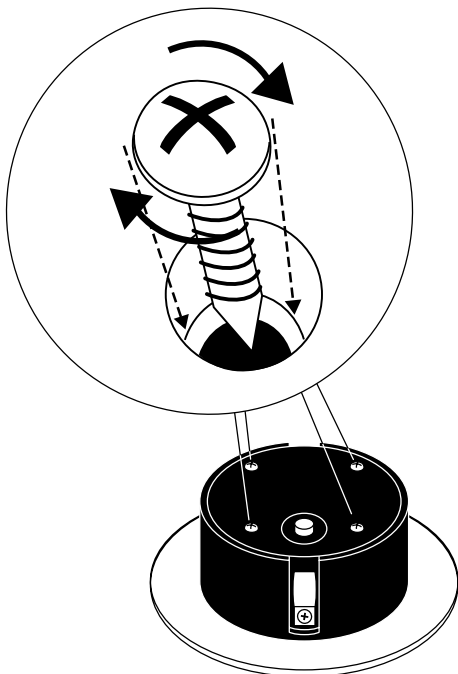



6.

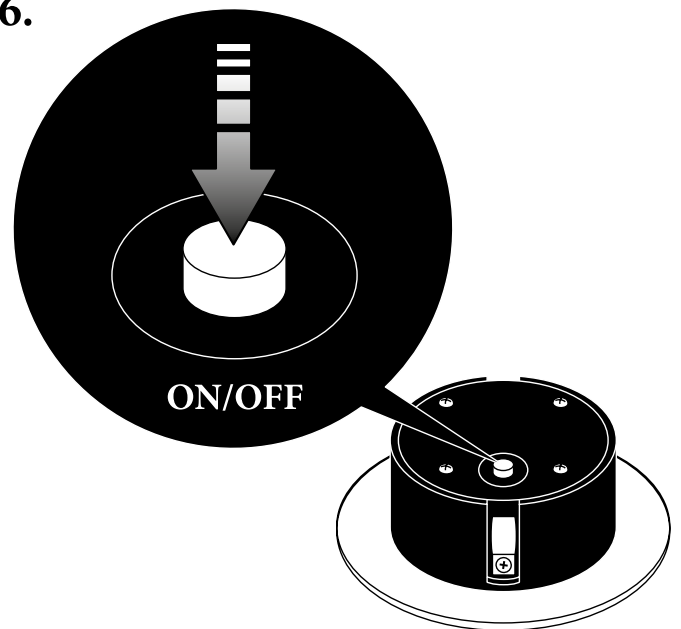

7.

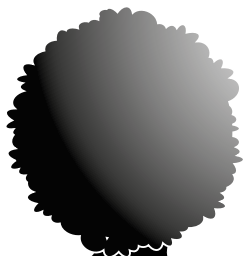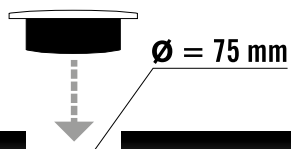


9.

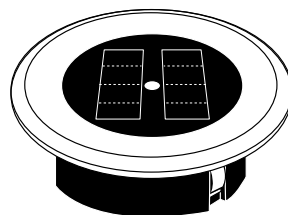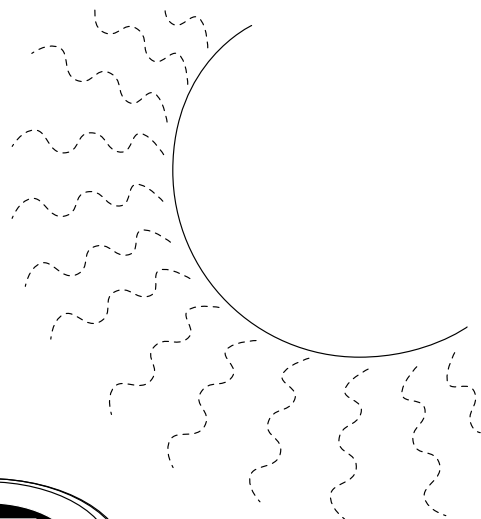


>8 h



10.

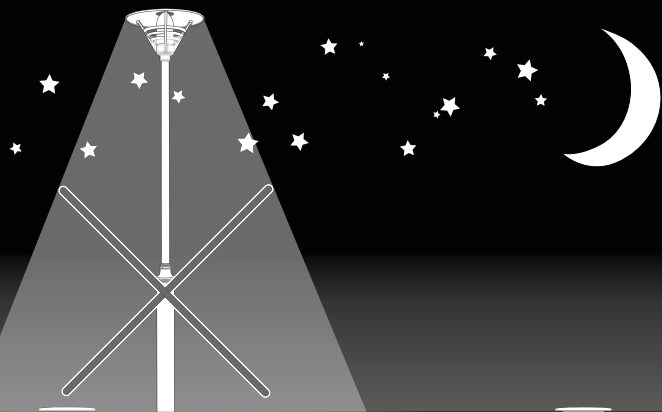

8.

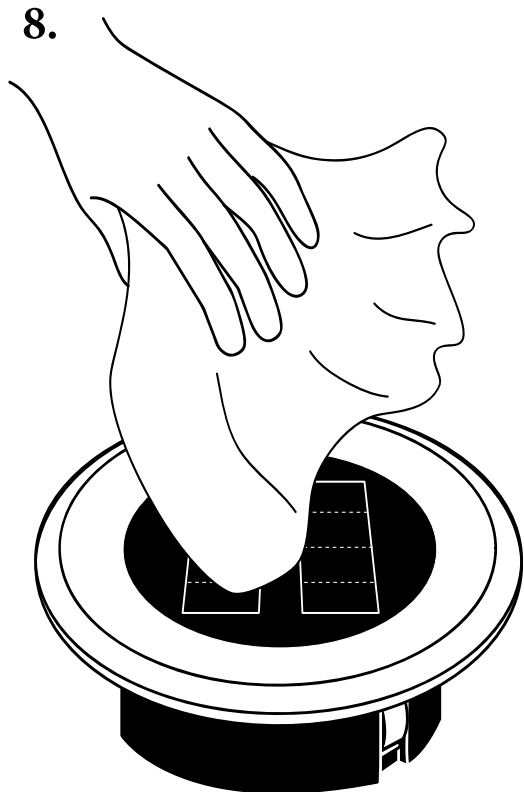

11.

- SE - OBS! Använd endast återuppladdningsbara batterier.
 DE - ACHTUNG! Laden Sie keine unaufladbaren Batterien wieder auf.
 GB - NOTE: Do not recharge non-rechargeable battery.
 FR - ATTENTION! Ne jamais recharger des piles non-rechargeables.
 FI - HUOM: Käytä valaisimessa vain ladattavia akkuja.
 NO - OBS! Skal kun bruke oppladbare batterier.
 DK - BEMÆRK: Anvend kun genopladelige batterier.
 NL - ATTENTIE: Laadt geen niet-oplaadbare batterijen opnieuw op!
 PL - UWAGA! Nie doładuj jednorazowych baterii.
 IT - NOTA: Non ricaricare la batteria non ricaricabile.
 ES - NOTA: No recargue baterías no recargables.
 CZ - POZNÁMKA: Nenabíjejte baterie na jedno použití.
 SK - POZNÁMKA: Nenabíjateľnú batériu nenabíjajte.
 EE - MÄRKUS: Ärge laadige mittetaaslaetavat patareid.
 LV - PIEZĪME: Neuzlādēt atkārtoti neuzlādējamu bateriju.
 LT - DĖMESIO! Pakartotinai nekraukite neįkraunamos baterijos.
 RU - ПРИМЕЧАНИЕ: Не перезаряжайте перезаряжаемую батарею.