Interiors 1900

New Classics Collection

Assembly Instructions for Stanford 12 Light Pendants

Please read the instructions carefully before starting work and retain for future reference.

Always turn off the mains supply at the consumer unit, shut off the circuit breaker, or remove the circuit fuse before commencing installation.

This fixture should only be installed by a qualified electrician.

This fixture is suitable for indoor, non-bathroom, use only.

Installation:

- 1. Screw the pipe (J) onto the threaded post (I), then affix to coupling (K), and tighten it.
- 2. Use the mounting bracket (D) to mark screw holes, and affix to the ceiling (A) using appropriate fixings (B&E).
- 3. Connect the house supply to the terminal block (C), according to the wiring diagram in Fig. 2, ensuring that the terminal screws are tightened securely and that there are no stray wires. If there is more than one supply cable present, seek professional advice.
- 4. Raise the ceiling cup (H) to the mounting bracket (D), and then secure with the lock washers (G) and screws (F).
- 5. If using shades (not supplied), place short candle drip over the lampholder, followed by the shade and secure in place using the shade ring. Otherwise use the longer candle drip (L)
- 6. Install bulbs (M). **Do not exceed the maximum wattage** recommended on the candle sleeve.

Figure 1


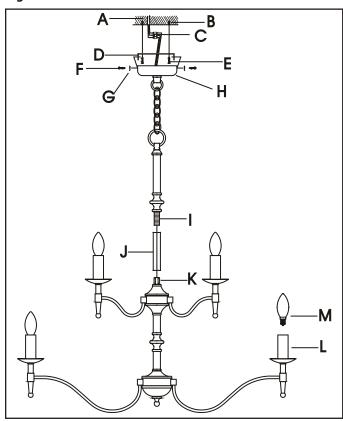


Figure 2

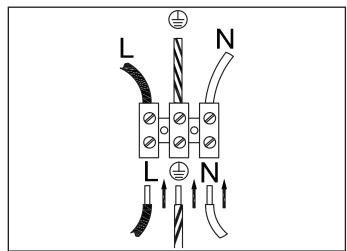

This instruction is suitable for item numbers: CA1P12B CA1P12N

www.interiors1900.co.uk