

# Interiors

1900

## Assembly Instructions for Penn & Columbia Wall Lights

### NEW CLASSICS

- Please read the instructions carefully before starting work and retain for future reference.
- This fixture should only be installed by a qualified electrician, in accordance with IEE regulations.
- This fixture is suitable for indoor, non-bathroom, use only.
- Always turn off the mains supply at the consumer unit, shut off the circuit breaker, or remove the circuit fuse before commencing installation.

#### Installation:

1. Position the mounting bracket (D) centrally onto the wall (A) and mark through the fixing holes onto the wall. Check that there are no hidden cables at these positions and drill pilot holes for screws (E) into the wall (A). (Please use correct type of screws or wall anchor for wall).
2. Insert two suitable wall anchors (B) into the pilot holes in the wall (A).
3. Align the fixing holes in the mounting bracket (D) with the pilot holes, and secure the mounting bracket (E) with two screws (E).
4. Make electrical connections in the terminal block (C) per expanded wiring diagram (Figure 2). Check that the terminal screws are tightened securely and that there are no stray wires, or bare cable present.
5. Raise the front plate (F) to the mounting bracket (D), and then secure the front plate (F) with the screws (G).
6. If you are installing shades (sold separately) then use lamp holder cup (I), or else use longer tube (K). Place shade over socket (H), then secure shade with retaining ring (J).
7. Install bulbs to sockets (H), ensuring they are the correct wattage and shape for the fitting, as stated on the bulb holder.
8. Turn on the electrical supply and test light illuminates.

Figure 1


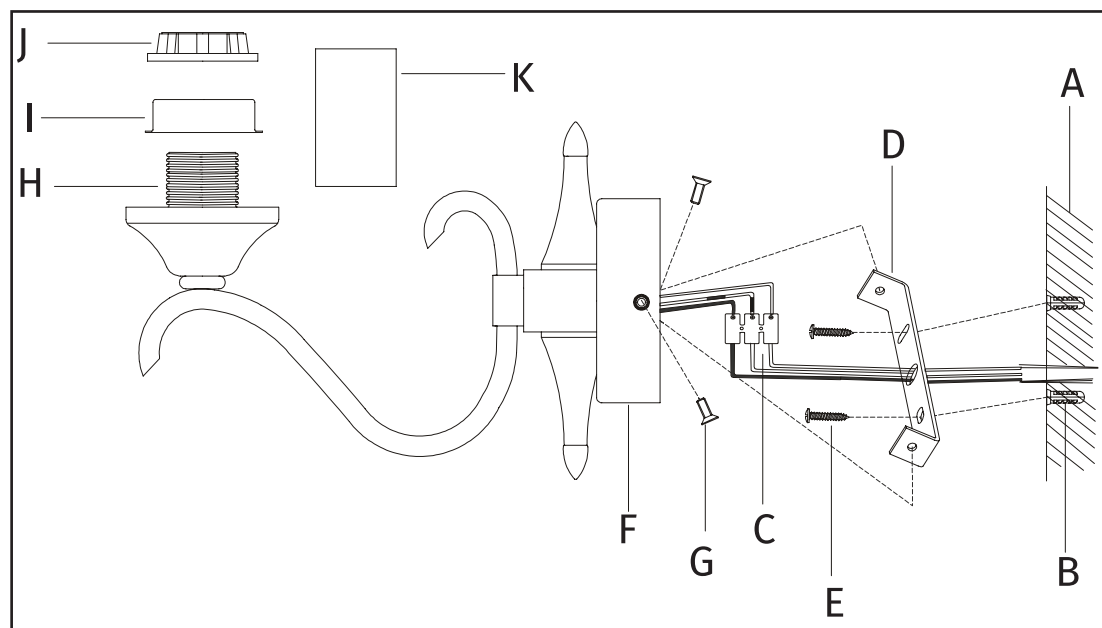


Figure 2

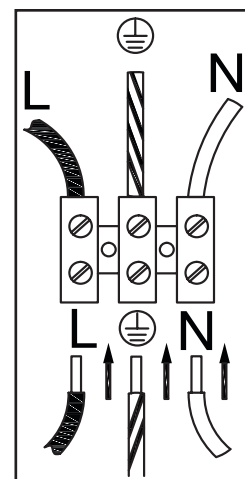

Suitable for indoor use only.

[www.interiors1900.co.uk](http://www.interiors1900.co.uk)

Lighting Association Accredited  
LS9 0SE 01/12/2017