

### ROCHAMP

- This product is only suitable for connection to a 240V~50Hz supply in accordance with current IEE wiring regulations. It should be installed in accordance with local building regulations and is for domestic ceiling use only. It is not suitable for a bathroom location.
- Before installing your light fitting always switch off the mains supply and remove the appropriate fuse or switch off the appropriate circuit breaker before commencing installation.
- This is a Class I product, and must be Earthed. The terminal blocks are supplied according to requirements of the fitting.
- Never fit bulbs of a higher wattage than those specified on the label, as these may cause overheating and damage the fitting.
- This fitting is heavy. Ensure that the structure you are fixing to is strong enough to safely take the weight. Please use an assistant to help you fit the product.
- It is essential to use the appropriate fixings for the fixing location. Supplied fixings are suitable for a wooden joist only
- If you are in any doubt about your competence please consult a qualified electrician.
- If any modification is made it will invalidate the warranty and may render the product unsafe.

To affix to the ceiling (Diagram 1, 2 & 3)

1. **Figure 1:** First determine the desired drop of the chandelier. Remove any excess links using suitable chain pliers. The finish is easily scratched and care must be taken. If the chain is long it is desirable to thread the cable through every 4th link to ensure it remains tidy. Finally thread the cable through the rod and into the ceiling cup. Double check the length of the fitting and trim the cable if necessary. Rewire the cable into the insulation box.
2. Using appropriate fixings attach the ceiling plate to the ceiling. Ensure that the hook is close enough to the mains supply cable that the ceiling rose will cover it. Ensure that you do not damage any cables or pipes while making the fixing.
3. Carefully lift the chandelier to the ceiling and hang with the fixing loop onto the hook.
4. **Figure 2:** Support your fitting and connect the house wiring to the terminal block. **Note: This product is Class I, and MUST be Earthed. Please see expanded wiring details below.**

Fig 2.


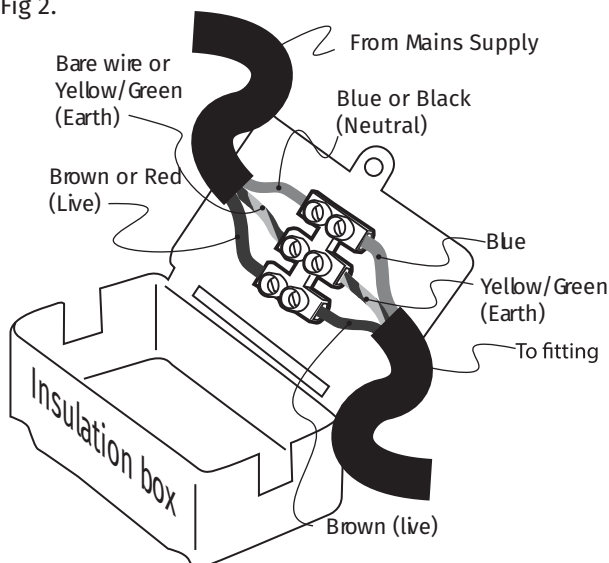


Fig 1.



The 4th terminal block connector is used for the "loop" wires of the "Ring Circuit". There may be more than one set of cables in the "loop" connections. If there is a "Ring Circuit" and you do not understand the connections you must consult an electrician. Any loose terminal blocks – not secured to ceiling cup – should always be covered with 2 layers of good quality insulation tape.

5. See fig. 3. Carefully lift the ceiling cup into place. Ensure that all cables and the insulation box are housed in the ceiling cup without any cables being trapped. Secure with the set screw. Only tighten enough to hold the cup in place. Over tightening will damage the thread and render it useless.

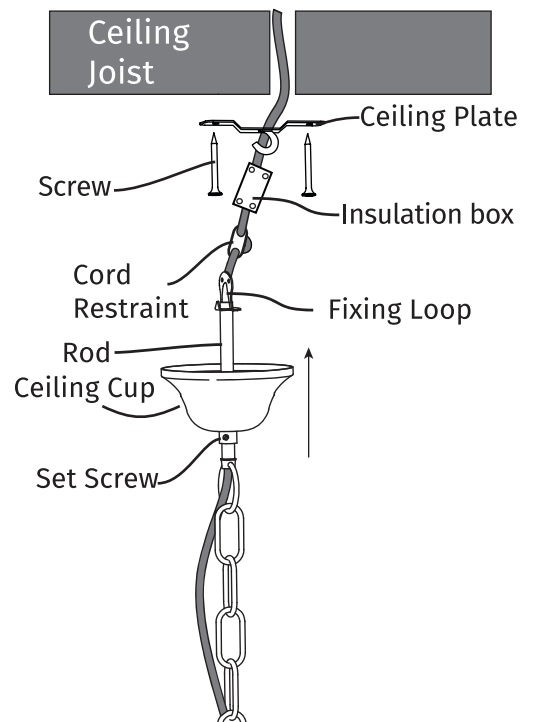

Suitable for indoor use only.

[www.interiors1900.co.uk](http://www.interiors1900.co.uk)

# Interiors

1900

## Assembly Instructions for Chandelier Lights

### ROCHAMP

#### To affix the shades (Diagram 4)

1. Your chandelier is supplied with two sets of sleeves, the short sleeve enables the use of the shade ring to accommodate soft shades (sold separately) and the long sleeve is to be used with 'bare bulbs'. These can easily be swapped by removing the shade ring, unscrewing the candle drip from the fitting and replacing with the alternative candle drip.
2. If using a soft shade fit the shorter candle drips. Position the shade on the bulb holder and secure with the plastic shade ring.
3. Fit the bulbs. **Do not fit a higher wattage or different shaped bulb from that mentioned on the bulb holder, as this could cause over-heating and damage the lamp.**
4. Finally switch on the fitting to ensure it lights up.

Fig 3.


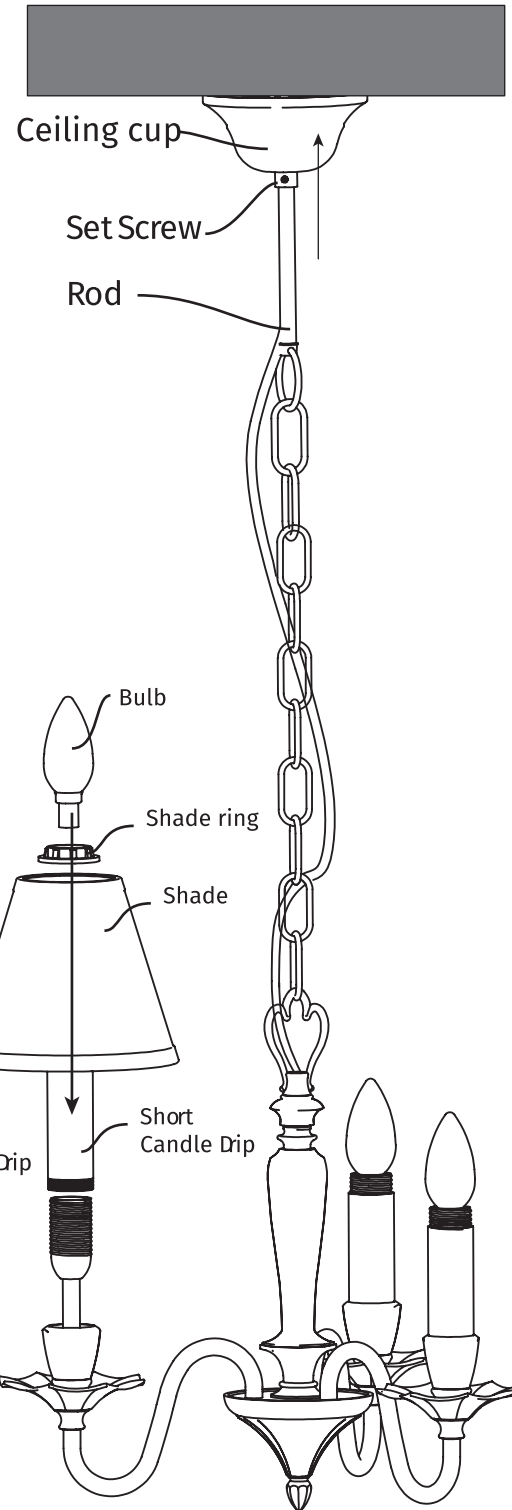


Fig 4.

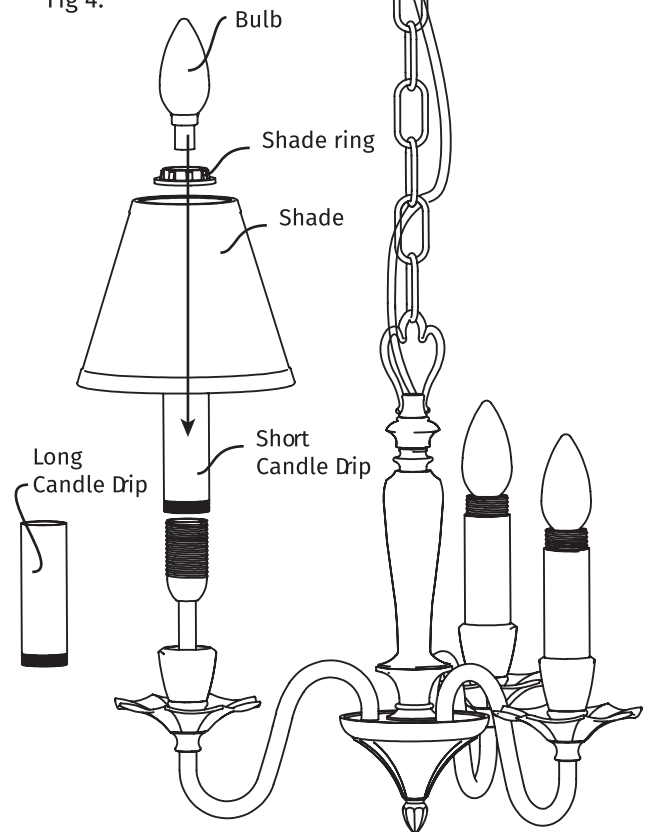

Suitable for indoor use only.

[www.interiors1900.co.uk](http://www.interiors1900.co.uk)

Lighting Association Accredited  
LS9 OSE 16/08/2017