

New Classics Collection

Assembly Instructions for Stanford Pendant Lights

Please read the instructions carefully before starting work and retain for future reference.

Always turn off the mains supply at the consumer unit, shut off the circuit breaker, or remove the circuit fuse before commencing installation.

This fixture should only be installed by a qualified electrician.

This fixture is suitable for indoor, non-bathroom, use only.

Installation (Figure 1-1):

1. Thread the stem (J) onto the screw thread (I), and attach this assembly to the top of the fitting (K).
2. Use the mounting bracket (D) to mark screw holes, and affix to the ceiling (A) using appropriate fixings (B&E).
3. Connect the house supply to the terminal block (C), according to the wiring diagram in Fig. 2, ensuring that the terminal screws are tightened securely and that there are no stray wires. If there is more than one supply cable present, seek professional advice.
4. Raise the ceiling cup (H) to the mounting bracket (D), and then secure with the lock washers (G) and screws (F).
5. If using shades (not supplied), place short candle drip over the lampholder, followed by the shade and secure in place using the shade ring. Otherwise use the longer candle drip (L)
6. Install bulbs (M). Do not exceed the maximum wattage recommended on candle sleeve.

Alternatively, the fitting can be installed as a shorter version, see figure 1-2:

1. Screw the post (C1) into the coupling (D1), place the cap (B1) onto the post (C1), then screw the loop (A1) into the post (C1).
2. Attach the pipe (J) onto the screw thread (I), and attach the assembly into the coupling (K).
3. After assembly, repeat the steps 2 to 8. (FIG.1-1)


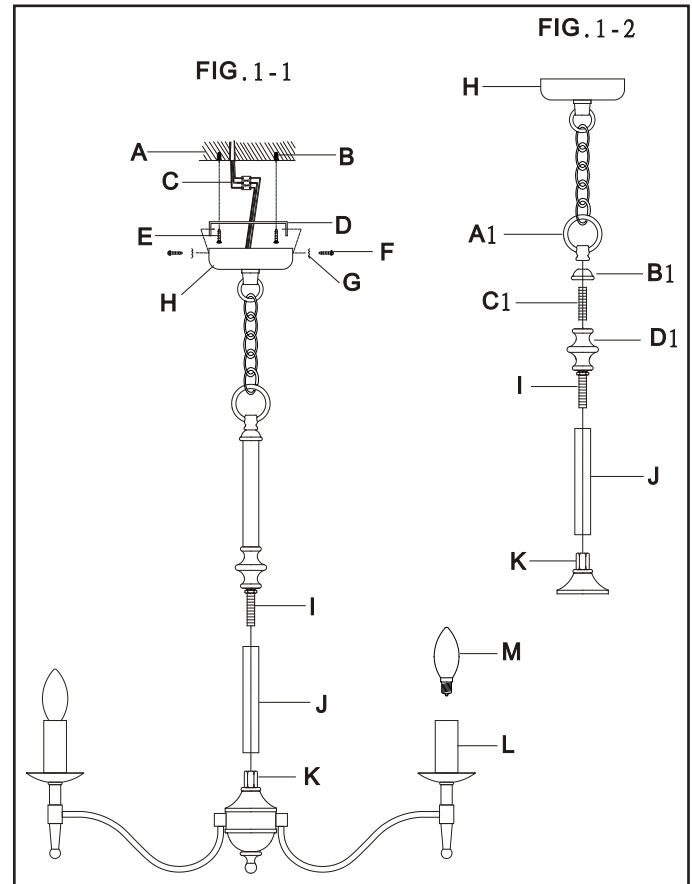


Figure 2

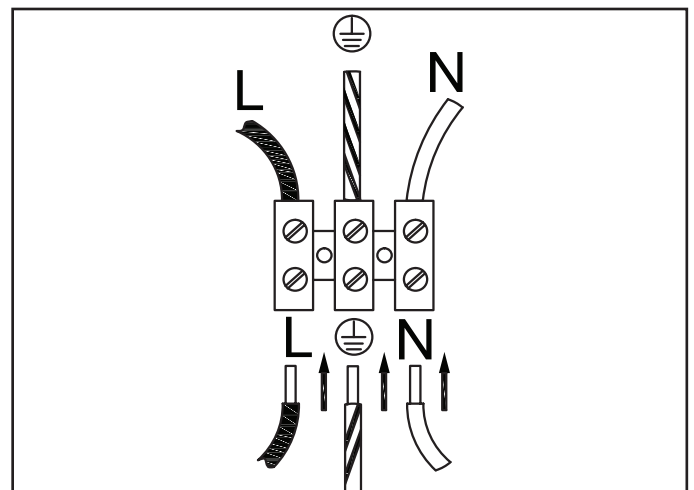

This instruction is suitable for item numbers:

CA1P3B CA1P3N
CA1P5B CA1P5N
CA1P8B CA1P8N