# Wiring with the Photocell


Disconnect power, remove junction box cover, place the SWITCH in knockout hole and fasten with locknut.

Wire according to the diagram in right hand. Do not install the switch with the Photocell facing artificial or reflected light. This will cause the hit to cycle on and off at night.

The Max rate loading is 500W for Tungsten or 800VA Ballast. the Max of 5 fitting can be linked(100W)

The Max rate loading is 500W for Tungsten or 800VA Ballast. the Max of 3 fitting can be linked(150W)

The Max rate loading is 500W for Tungsten or 800VA Ballast, the Max of 2 fitting can be linked(200W)

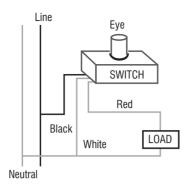

#### Technical data

Voltage:

220-240 V~. 50 Hz

Bulb Type: 78971: 100W LED Module (SMD), 6500K This product contains a light source of energy efficiency class F.

78972: 150W LED Module (SMD), 6500K This product contains a light source of energy efficiency class **E**.

78973: 200W LED Module (SMD), 6500K This product contains a light source of energy efficiency class **E**.



Non-replaceable light source



Non-replaceable control gear



Conformity with all relevant UKCA Directive requirements



Conformity with all relevant EC Directive requirements.



This product is Class 1, must be connected to earth.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.



This product is not suitable for dimming.



This product is rated at IP65.

# Care and Safety

We recommend cleaning with a soft dry cloth. Do not use solvents or abrasive cleaners as these could damage the finish. For your safety, always switch off the power supply before cleaning.



This light source is protected by a shade. This part must be replaced immediately should the shade become cracked or damaged. This fitting must not be used without the shade in place.

For further information, please visit https://www.lighting-info.co.uk/78971

V4 07/01/2022

**UK Manufacturer: BH17 7BY** EU Manufacturer: Brilliant AG Brilliantstrasse 1, D-27442 Gnarrenburg



Instruction manual

# Mantra Floodlight

78971, 78972, 78973





Thank you for purchasing this light fitting. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product. Please retain these instructions for future reference.

## Warning

This is a Class 1 product and must be earthed.

Please read these instructions carefully before commencing any work.

This unit must be fitted by a competent and qualified electrician.

Install in accordance with the IEE Wiring regulations and current Building Regulations.

Check the pack and make sure you have all the parts listed.

To prevent electrocution switch off at the mains supply before installing or maintaining this fitting. Ensure other persons cannot restore the electrical supply without your knowledge.

This light fitting should be connected to a circuit with a 30mA RCD fitted.

If replacing an existing fitting, make a careful note of the connections.

The entire unit gets hot whilst on for a period of time.

This product is not suitable for location in or near a marine environment.

The external flexible cable or cord of this luminaire cannot be replaced. If the cord is damaged, the luminaire must be destroyed.

Terminal block not included. Installation may require advice from a qualified person.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

## Layout

Plan the desired layout of these fittings carefully, ensuring the cables will reach the distance between the junction box (not supplied) and the light fitting.

Avoid locating any cables in positions that would cause a hazard. Position cables and outdoor rated junction boxes (not supplied) away from areas where they may be at risk from being cut, trapped or damaged.

This product is supplied with 1 metres of H05RN-F outdoor grade rubber sheathed cable ready for connection to an approved, outdoor rated terminal block which is not supplied and must be obtained. The mains supply cable must have a minimum cross sectional area of 1.0mm<sup>2</sup>

Cables must be protected using suitable conduit or plastic trunking.

This is a floodlight product, and therefore should be positioned where it will not cause a glare hazard.


#### Installation


Existing fittings must be completely removed before installation of a new product. Before removing the existing fitting, carefully note the position of each set of wires.

Note that the switch is turned off before installation.

Ensure that the screws and cable entry points are sealed to maintain the IP rating of the product.


- Hold the product in position and mark the location of the fixing holes. A minimum of two fixing points must be used.
   Ensure the wall is capable of holding the weight of the product. The bracket can be removed from the fitting for ease of installation.
- Drill and plug the wall at the marked positions.
- · Wire as detailed wiring.
- Refit the cover on the IP terminal block. Ensure that the seals are correctly located, and refit the screws.
- Fix the bracket to the wall using the screws and plugs (not supplied). Take care to avoid damaging any concealed wiring and pipes. The correct fixings should be used for brick or cavity walls.
- Using the allen key (not supplied), loosen the bolts on the side, and adjust the fitting to the desired position. Ensure
  that the cable is not snagged. Re-tighten the bolts.

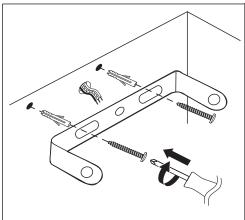

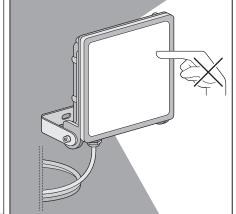

#### Wiring

Terminal block not included. Installation may require advice from a qualified person. Connect to an approved outdoor rated terminal block, observing the wiring diagram here.



## Check that...

- You have correctly identified the wires.
- The connections are tight.
- No loose strands have been left out of the connection block.